

INTCAMVW03

**For Connection of a
VAG factory rear-view
camera version HIGH or
LOW
to a device with NTSC-compatible CVBS input**

Contents

1. Prior to installation

- 1.1. Delivery contents
- 1.2. Check compatibility of vehicle and accessories

2. Connection schema

3. Installation

4. Technical support

Legal Information

Changes/updates of the vehicle's software can cause malfunctions of the interface. We offer free software-updates for our interfaces for one year after purchase. To receive a free update, the interface must be sent in at own cost. Labour cost for and other expenses involved with the software-updates will not be refunded.

1. Prior to installation

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources.

1.1. Delivery contents

Take down the SW-version and HW-version of the interface boxes, and store this manual for support purposes.



1.2. Check compatibility of vehicle and accessories

Requirements

Vehicle

VW, Skoda, Seat

Navigation

VW RNS315/510, RCD510 and Skoda/Seat identical in the same way


with factory rear-view camera version HIGH or LOW

Limitations

After-market

A NTSC-compatible CVBS input must be

2. Connection schema

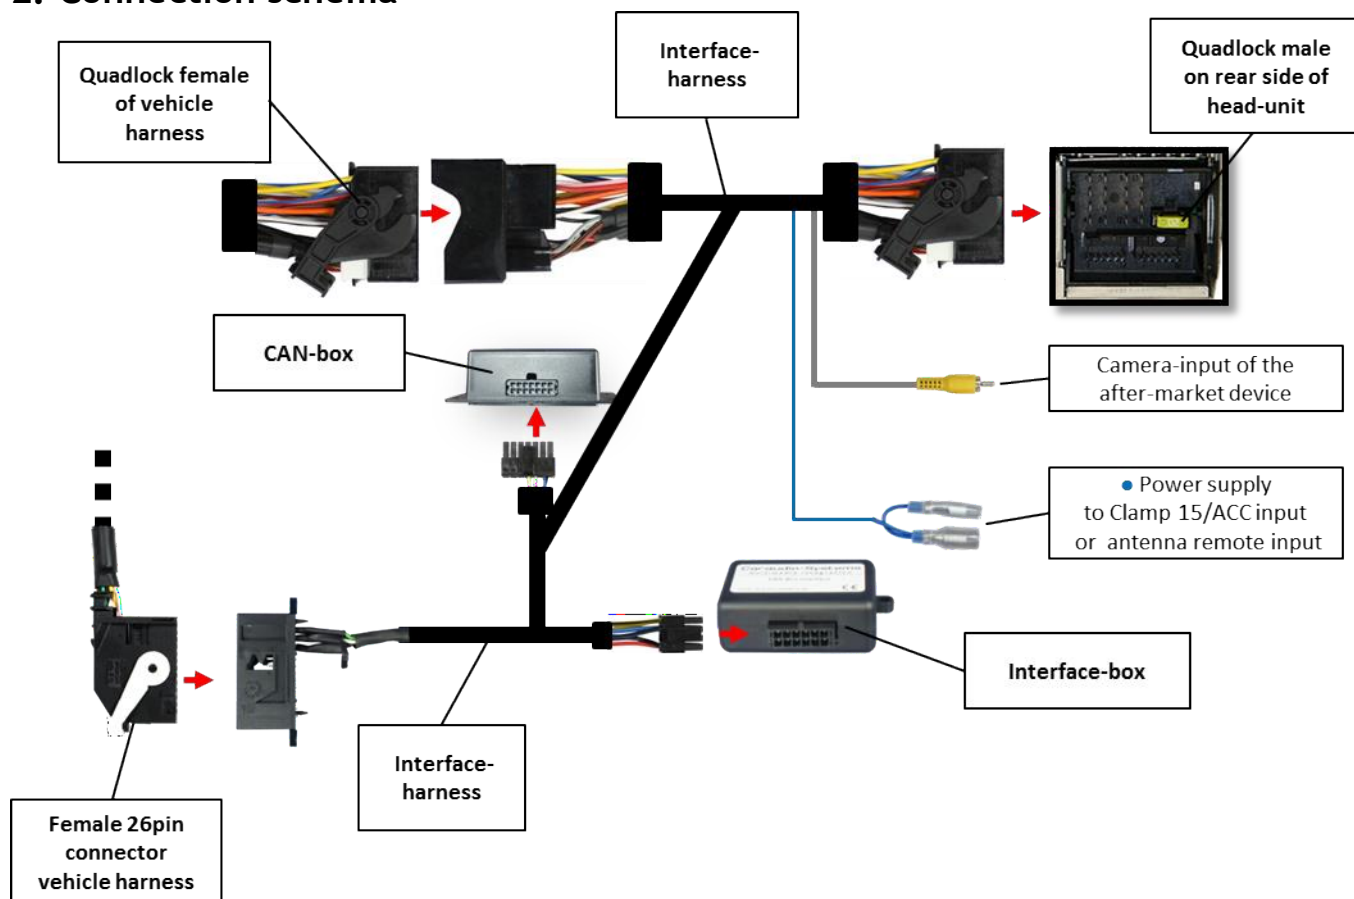

3. Installation

Switch off ignition and disconnect the vehicle's battery! If according to factory rules disconnecting the battery has to be avoided, it is usually sufficient to put the vehicle in sleep-mode. In case the sleep-mode does not show success, disconnect the battery with a resistor lead.

Place of installation is on rear of the head-unit.

4. Technical support

Corredoira Car Audio
Poeta Noriega Varela. 4
27004 Lugo - Spain
Tel.: 982 265 100
comunicados@grupocorreidra.com